

PATIO DOOR


INSTALLATION INSTRUCTIONS

Necessary Tools & Materials (Not Included)


- Circular Saw
- Chisels
- Drill
- 10d Finishing Nails
- Wood Shims
- Hammer
- Pry Bar
- Level
- Silicone Caulk
- Screws (2-1/2"-3" standard)

Optional Tools & Materials (Not Included)

- Screw covers (for aesthetics)
- Exterior key lock

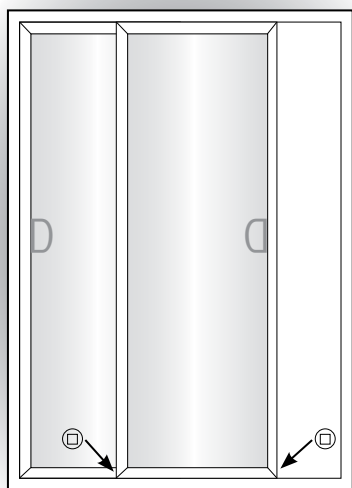

Adjust the operating panel with the screw at each end.

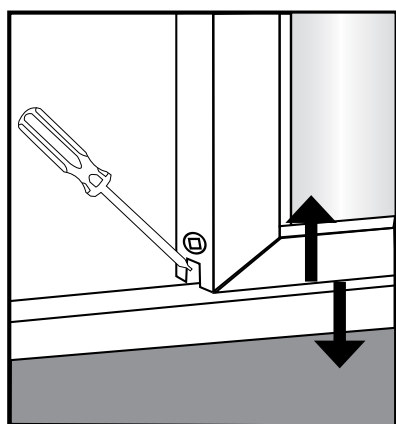

Raise or lower the operating panel using a square head screwdriver for both sides.


INSTALLATION

1. The dimension of the opening must exceed the exterior dimension of the door frame by 32 mm (1 1/4") in width and by 32 mm (1 1/4") in height.
2. When installing, this product must be squared and levelled.
3. Wedge the frame (see sketch) with 3 wedges between the structure, the sill and the jambs, and one at the head.
4. Make sure the head, sill and jambs are straight.
5. Fill the space between the door frame and the structure with insulation material. Be careful, as excessive insulation material may warp the frame.
6. Seal the interior and exterior perimeter of the door with caulking.


MAINTENANCE

1. Do not paint the vinyl or hardware as this will impair the door from functioning properly and will void the guarantee.
2. Clean the vinyl with a soft cloth and soap. All abrasive products will damage the surface finish.


STANLEY

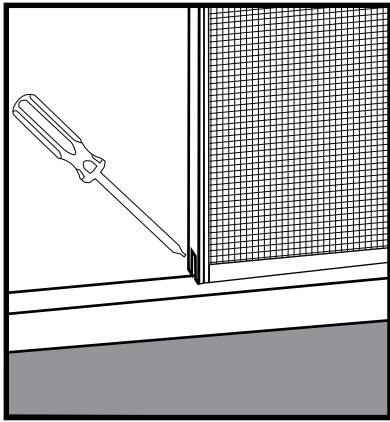

Adjust the door screen using a square head screwdriver for both sides, top and bottom.

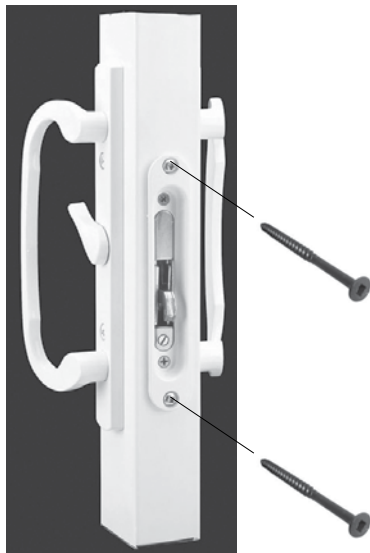

To attach mortise handle

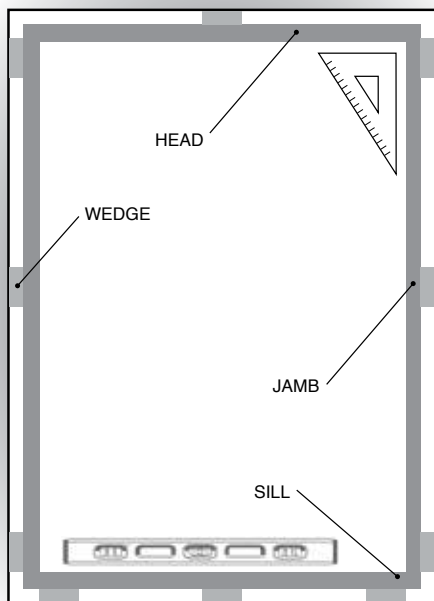

For your comfort, and to prevent condensation, experts recommend these humidity values:

Outside Temperature	Indoor Maximum Relative Humidity
-7C	35%
-12C	30%
-18C	25%
-23C	20%
-29C	15%



STANLEY